


CONTROL TEMP PACKAGING

A Product of

R.N.C. Industries Inc.



Assembly

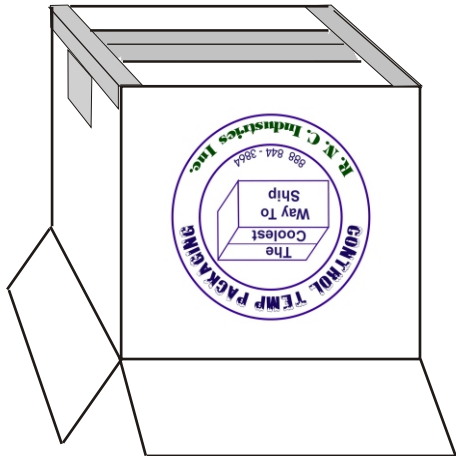


1. Tape bottom of box
← as shown.

2. Insert large pad into box as shown. Push bottom panel all the way down

3. Fold small pad into a "U" shape as shown. Insert into box (seam down) and push sides outward.

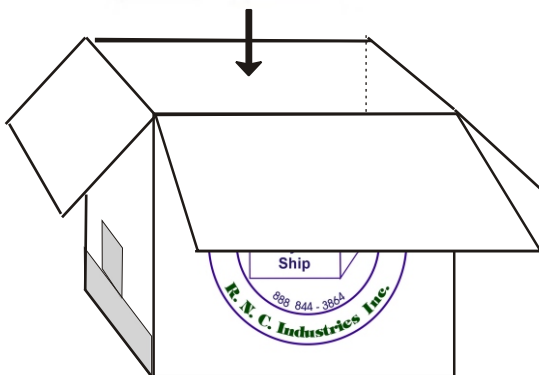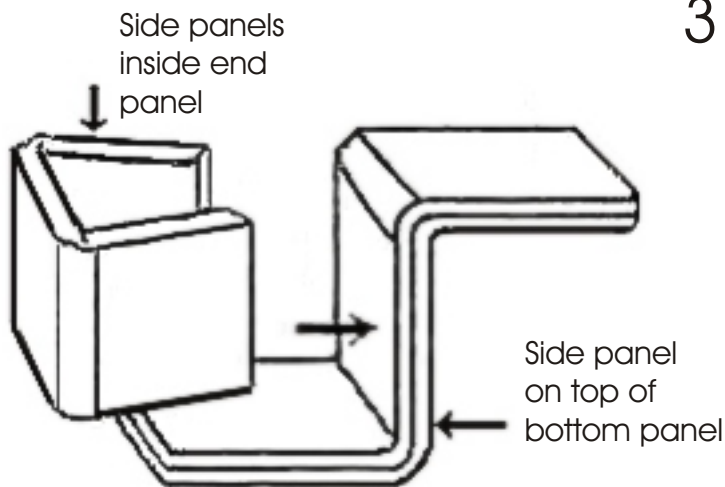

Tape all seams!

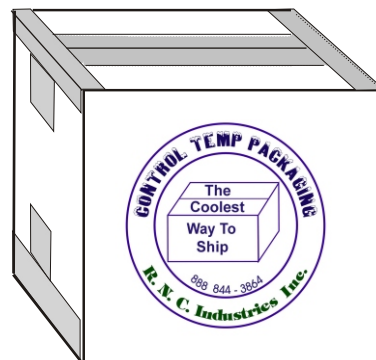

888-844-3864